

BR BRUDER

INSTRUCTION MANUAL FOR BRUDER “CLIFTON SPORT”

MOVEMENT: RONDA QUARTZ

WATER RESISTANT: 50M/164FT

PRECISION: +20/-10 SECONDS PER MONTH

BATTERY OPERATED



POSITION I: POSITION OF REST (WATCH RUNNING)

POSITION II: QUICK CHANGE CORRECTION FOR DATE

THE DATE CAN BE CORRECTED DURING THE DAY-CHANGING PHASE BETWEEN 10PM AND MIDNIGHT. THE DATE OF THE FOLLOWING DAY HAS TO BE SET, BECAUSE NO AUTOMATIC DATE CHANGE TAKES PLACE AT MIDNIGHT.

- PULL THE CROWN OUT TO POSITION II (WATCH STILL RUNNING).
- TURN THE CROWN CLOCKWISE UNTIL THE REQUIRED DATE APPEARS.
- PUSH THE CROWN BACK TO POSITION I.

POSITION III: SETTING THE TIME

- PULL THE CROWN OUT TO POSITION III (WATCH STOPPED).
- TURN THE CROWN, UNTIL THE CURRENT TIME IS DISPLAYED (REMEMBER THE 24 HOUR CYCLE).
- PUSH THE CROWN BACK TO POSITION I.

WELCOME TO THE BRUDERHOOD