

INSTRUCTION MANUAL FOR BRUDER "ASHTON" CHRONOGRAPH CALIBER NO. 0S20/0S2A

CHRONOGRAPH FUNCTION: CENTRE SECOND HAND CHRONOGRAPH 1/1 sec.

Timing up to 59 minutes 59 seconds

BATTERY: SR927W SONY

A) DISPLAY AND BUTTONS


B) SETTING THE TIME

C) SETTING THE DATE

D) USING THE CHRONOGRAPH

E) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

A) DISPLAY AND BUTTONS

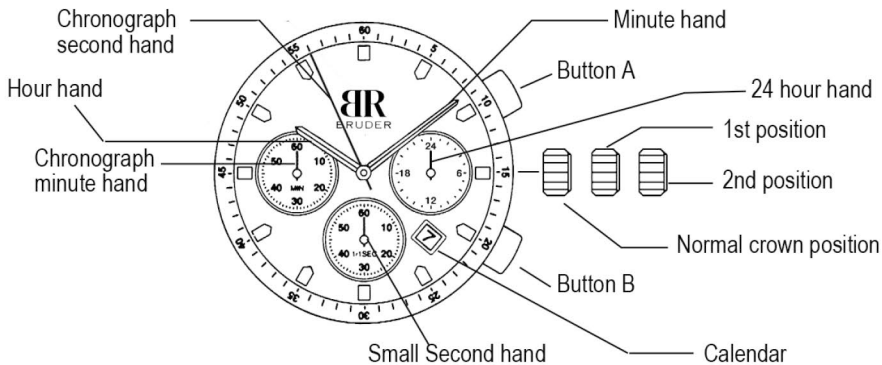

B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the small second hand begins to turn.

C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date. *If the date is set between the hours of around 9.00 PM and 1.00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the normal position.

D) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to a maximum of 59 minutes 59 seconds. The chronograph second hand keeps continuously for 59 minutes 59 seconds after starting.